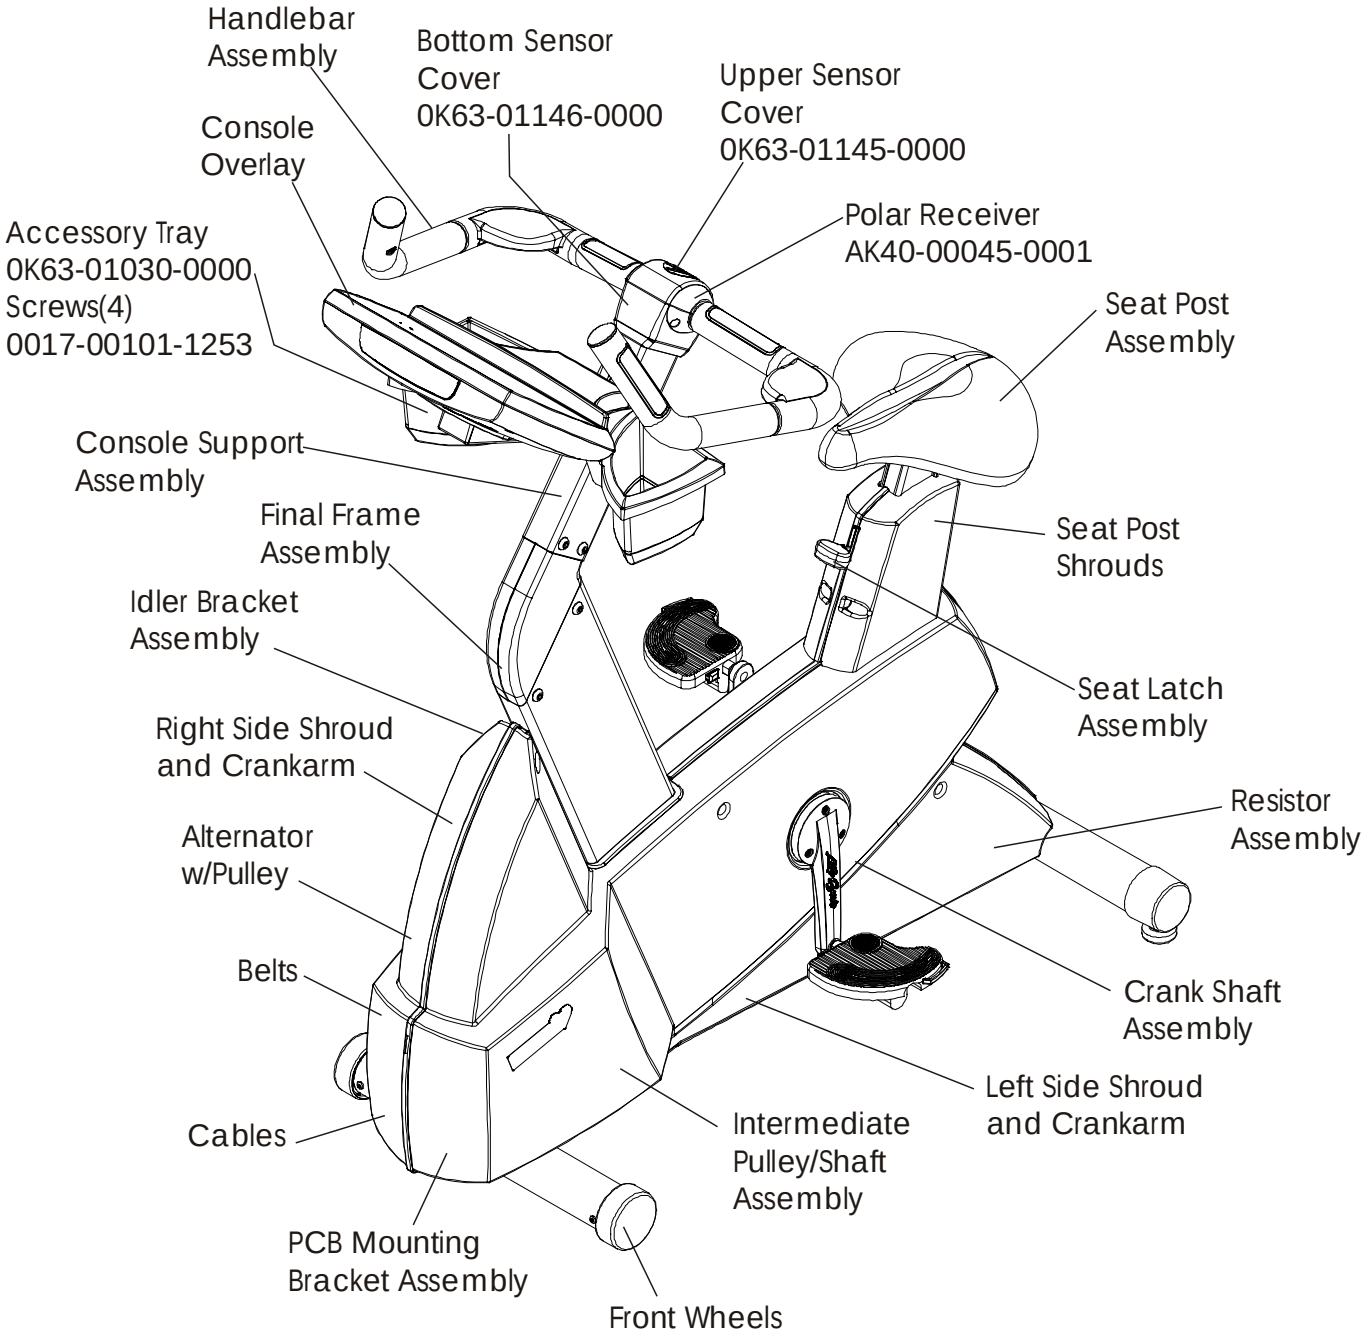

Operation Manual	M051-00K63-A043
Service Manual	XXXX-XXXXX-XXXX

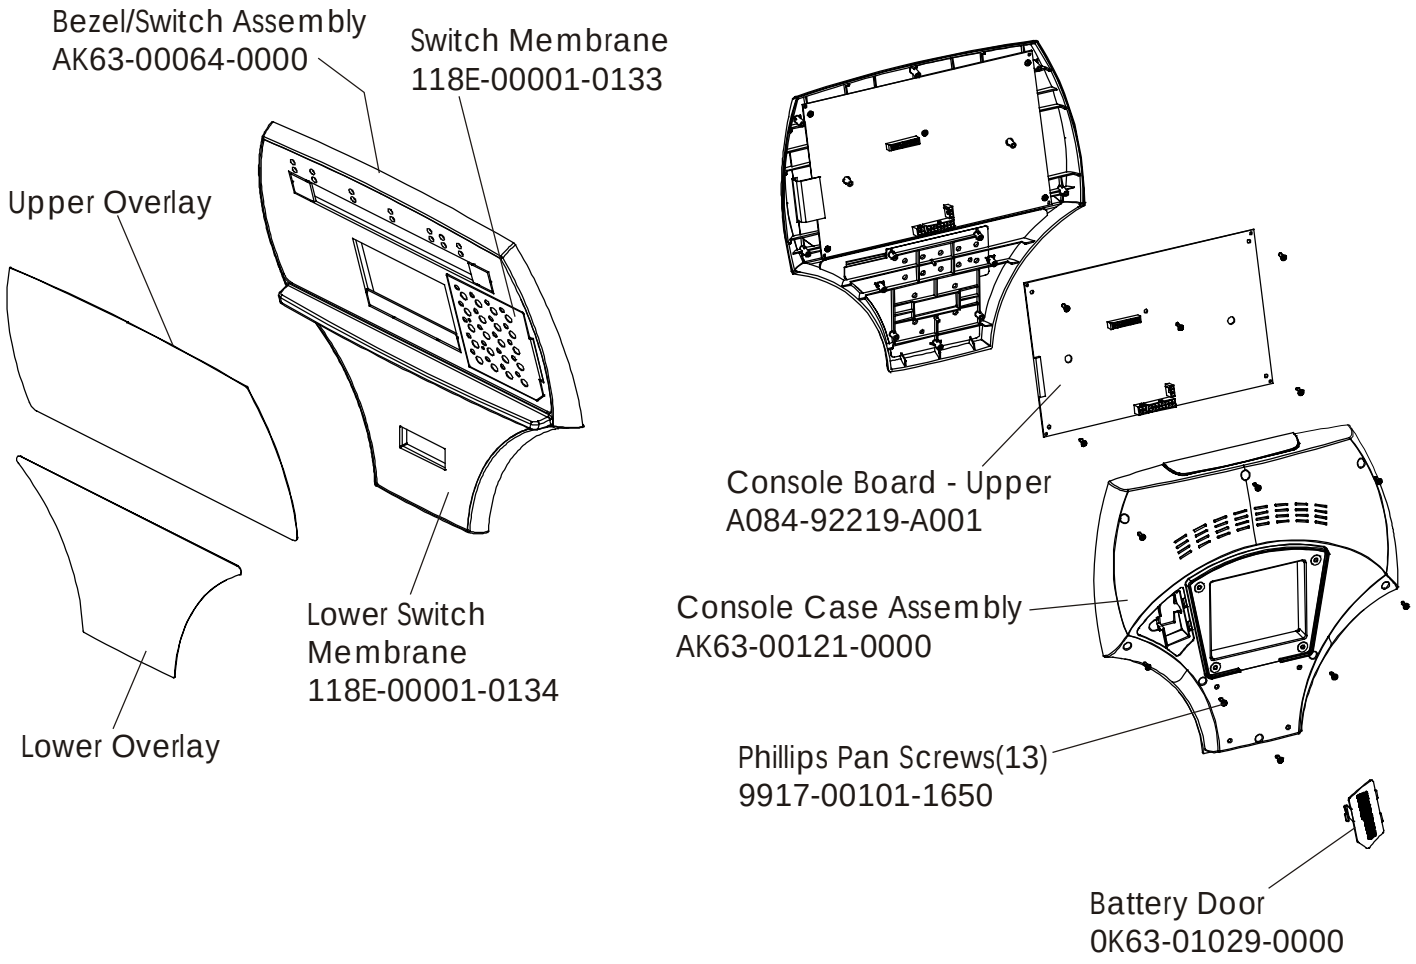

Console Assembly	Overlay Bezel	Upper Overlay	Lower Overlay
AK63-00070-0001 Eng Met	AK63-00063-0001 Eng Met	0K63-01096-0001 Eng Met	0K63-01098-0001 Eng Met
AK63-00070-0003 Ger Met	AK63-00063-0003 Ger Met	0K63-01096-0003 Ger Met	0K63-01098-0003 Ger Met
AK63-00070-0004 Spn Met	AK63-00063-0004 Spn Met	0K63-01096-0004 Spn Met	0K63-01098-0004 Spn Met
AK63-00070-0006 Jap Met	AK63-00063-0006 Jap Met	0K63-01096-0006 Jap Met	0K63-01098-0006 Jap Met
AK63-00070-0007 Frn Met	AK63-00063-0007 Frn Met	0K63-01096-0007 Frn Met	0K63-01098-0007
AK63-00070-0008 Itl Met	AK63-00063-0008 Itl Met	0K63-01096-0008 Itl Met	0K63-01098-0008 Itl Met
AK63-00070-0009 Itl Met	AK63-00063-0009 Itl Met	0K63-01096-0009 Itl Met	0K63-01098-0009 Itl Met
AK63-00070-0010 Por Met	AK63-00063-0010 Por Met	0K63-01096-0010 Por Met	0K63-01098-0010 Por Met

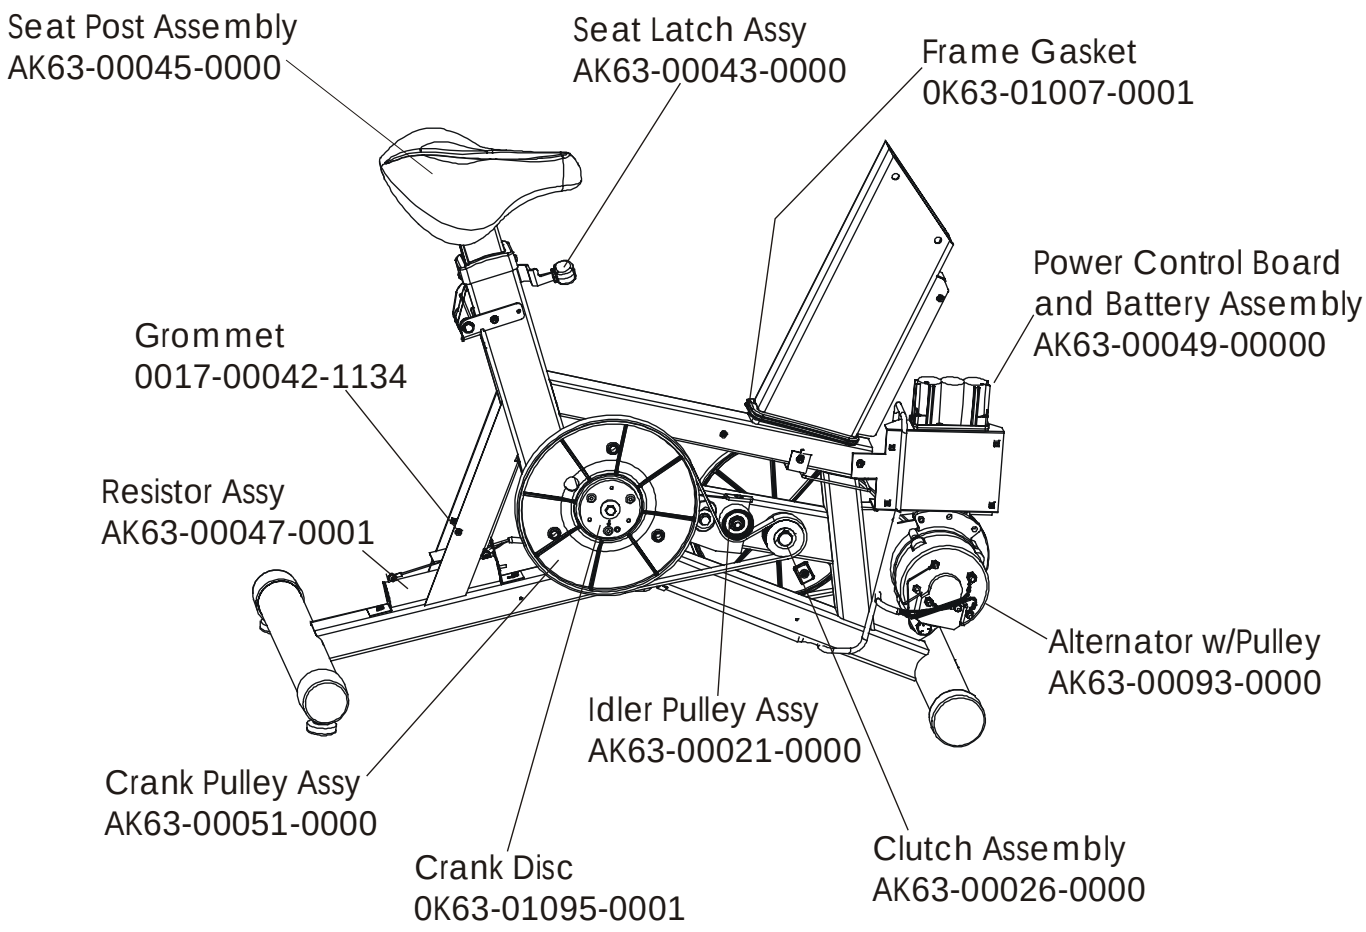
Seat Post Assembly
AK63-00045-0000
Seat Latch Assy
AK63-00043-0000
Frame Gasket
0K63-01007-0001
Power Control Board
and Battery Assembly
AK63-00049-00000
Grommet
0017-00042-1134
Resistor Assy
AK63-00047-0001
Alternator w/Pulley
AK63-00093-0000
Idler Pulley Assy
AK63-00021-0000
Crank Pulley Assy
AK63-00051-0000
Crank Disc
0K63-01095-0001
Clutch Assembly
AK63-00026-0000

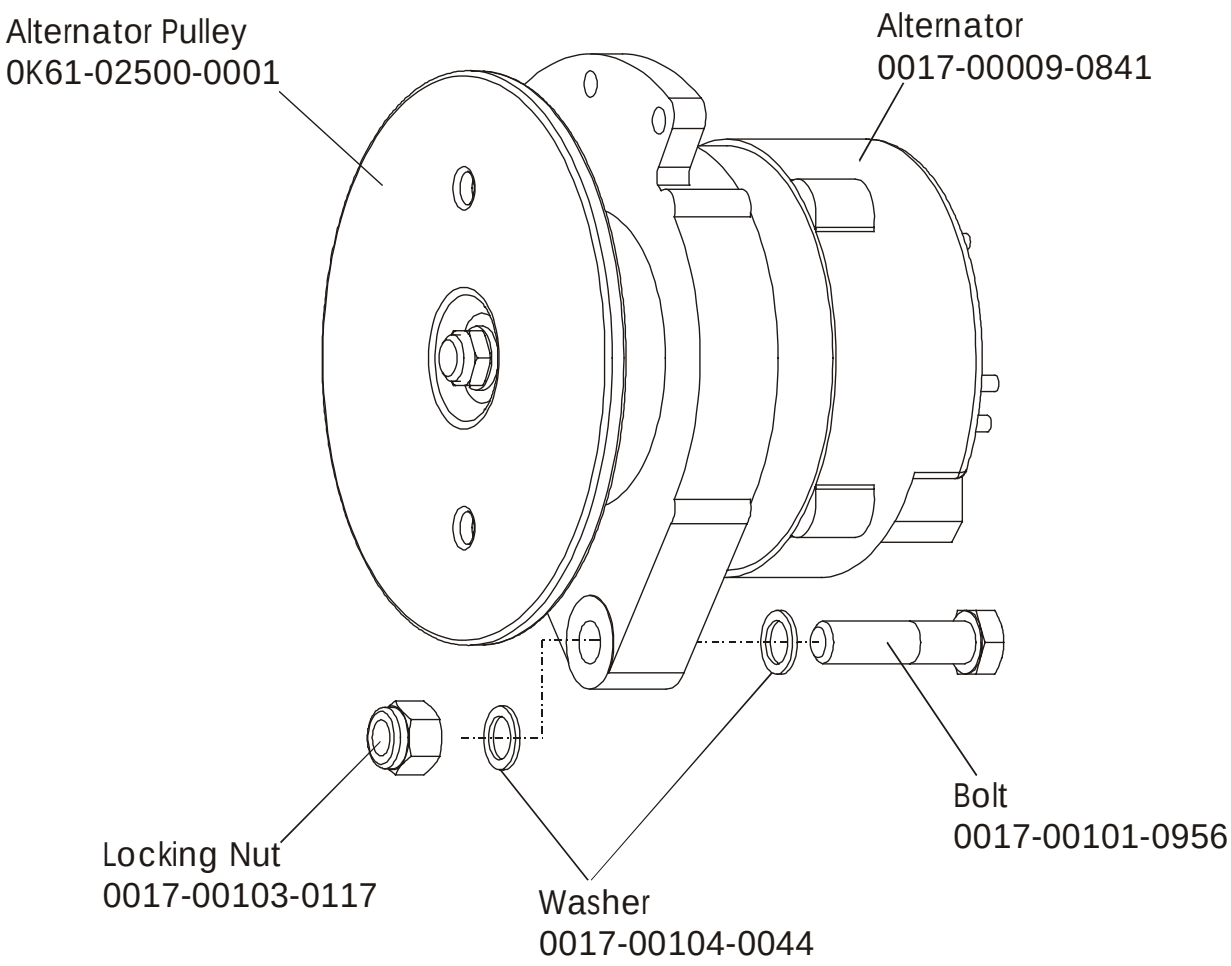
Alternator Pulley
0K61-02500-0001
Alternator
0017-00009-0841
Bolt
0017-00101-0956
Locking Nut
0017-00103-0117
Washer
0017-00104-0044

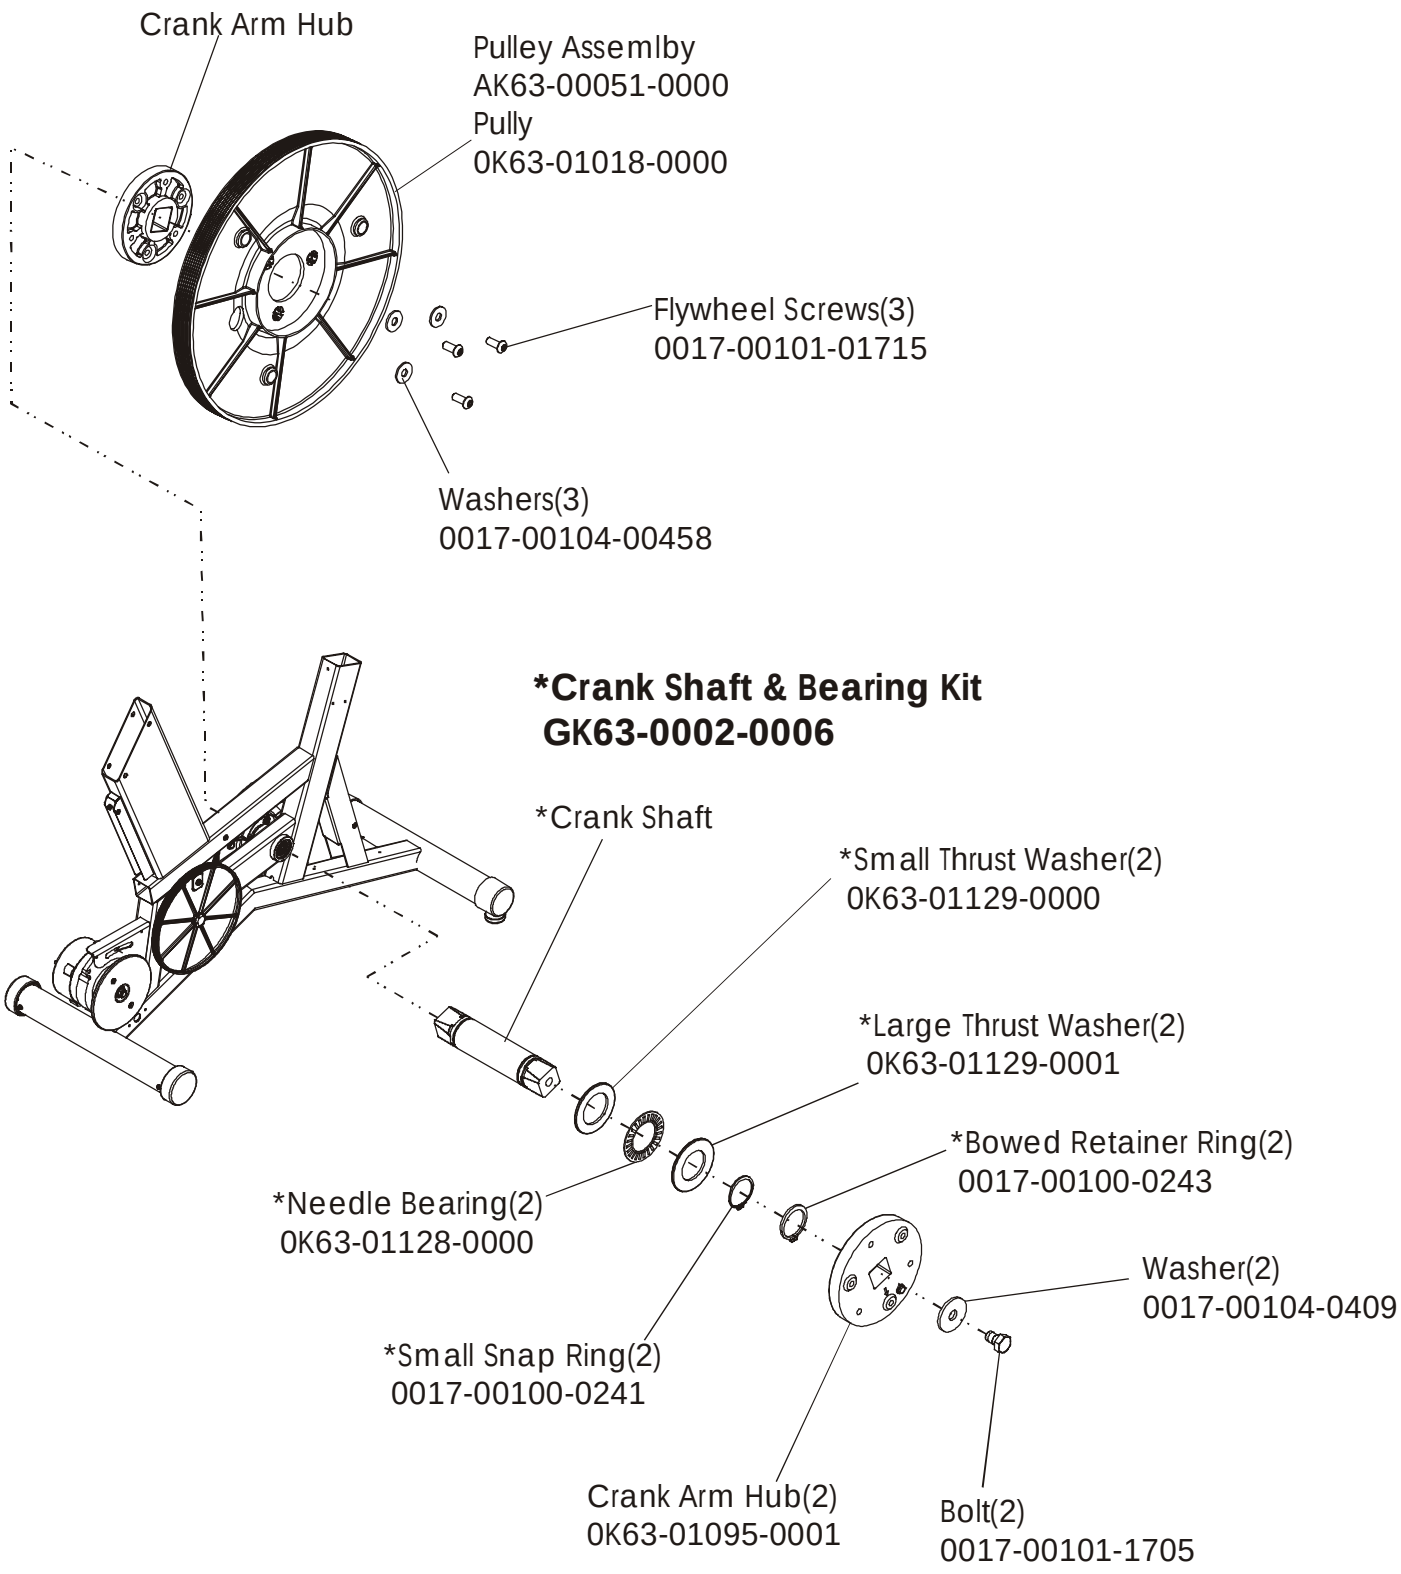
Crank Arm Hub
Pulley Assemlby
AK63-00051-0000
Pully
0K63-01018-0000
Flywheel Screws(3)
0017-00101-01715
Washers(3)
0017-00104-00458
*Crank Shaft & Bearing Kit
GK63-0002-0006
*Crank Shaft
*Small Thrust Washer(2)
0K63-01129-0000
*Large Thrust Washer(2)
0K63-01129-0001
*Bowed Retainer Ring(2)
0017-00100-0243
*Needle Bearing(2)
0K63-01128-0000
Washer(2)
0017-00104-0409
*Small Snap Ring(2)
0017-00100-0241
Crank Arm Hub(2)
0K63-01095-0001
Bolt(2)
0017-00101-1705

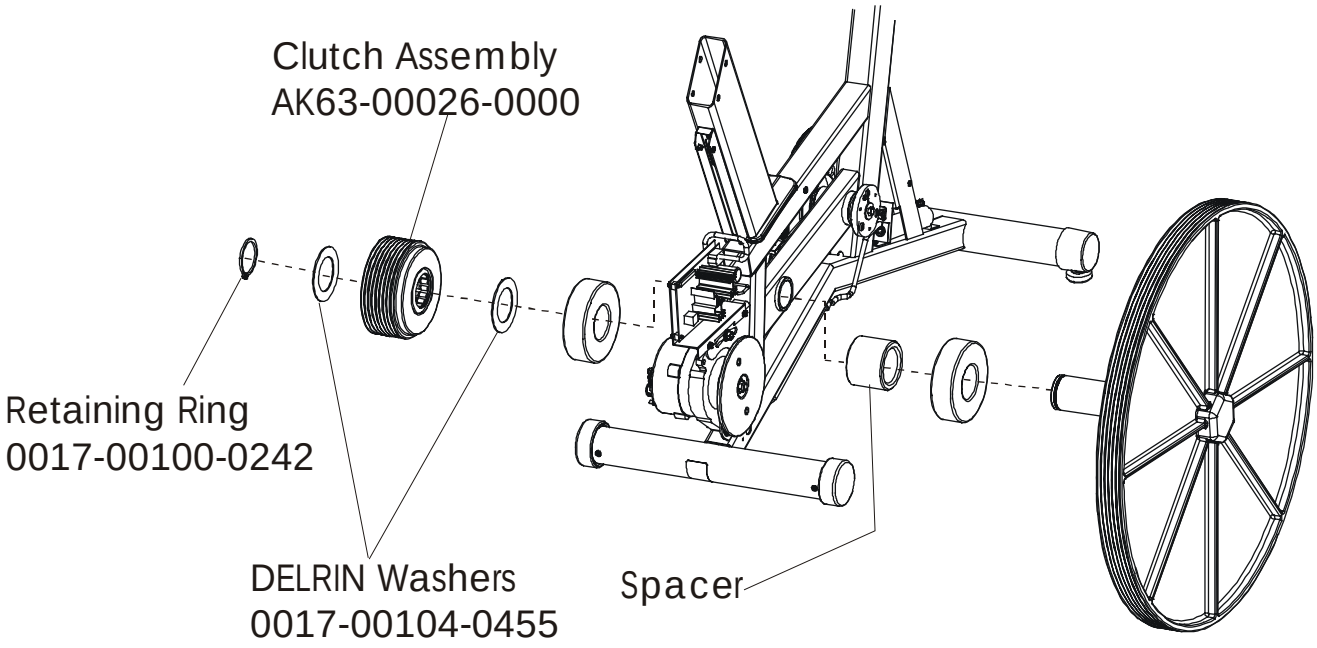
Clutch Assembly
AK63-00026-0000
Retaining Ring
0017-00100-0242
DELRIN Washers
0017-00104-0455
Spacer

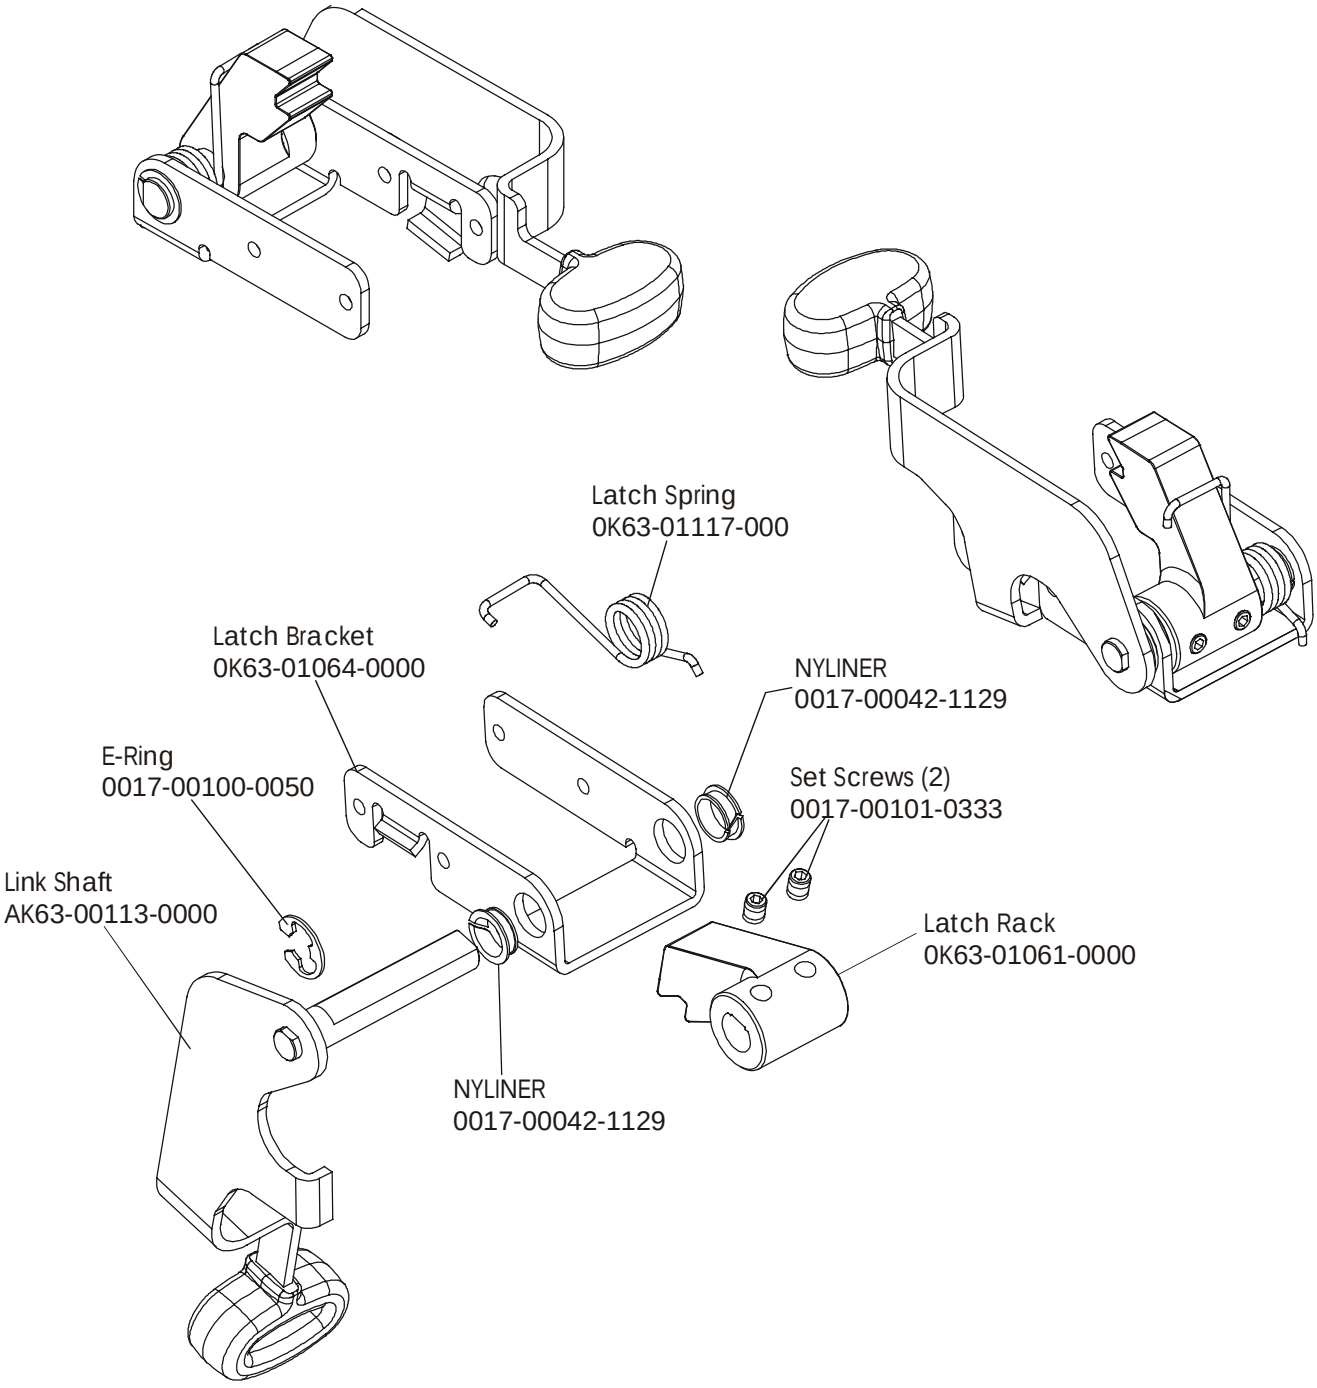
Latch Spring
0K63-01117-000
Latch Bracket
0K63-01064-0000
NYLINER
0017-00042-1129
E-Ring
0017-00100-0050
Set Screws (2)
0017-00101-0333
Link Shaft
AK63-00113-0000
Latch Rack
0K63-01061-0000
NYLINER
0017-00042-1129

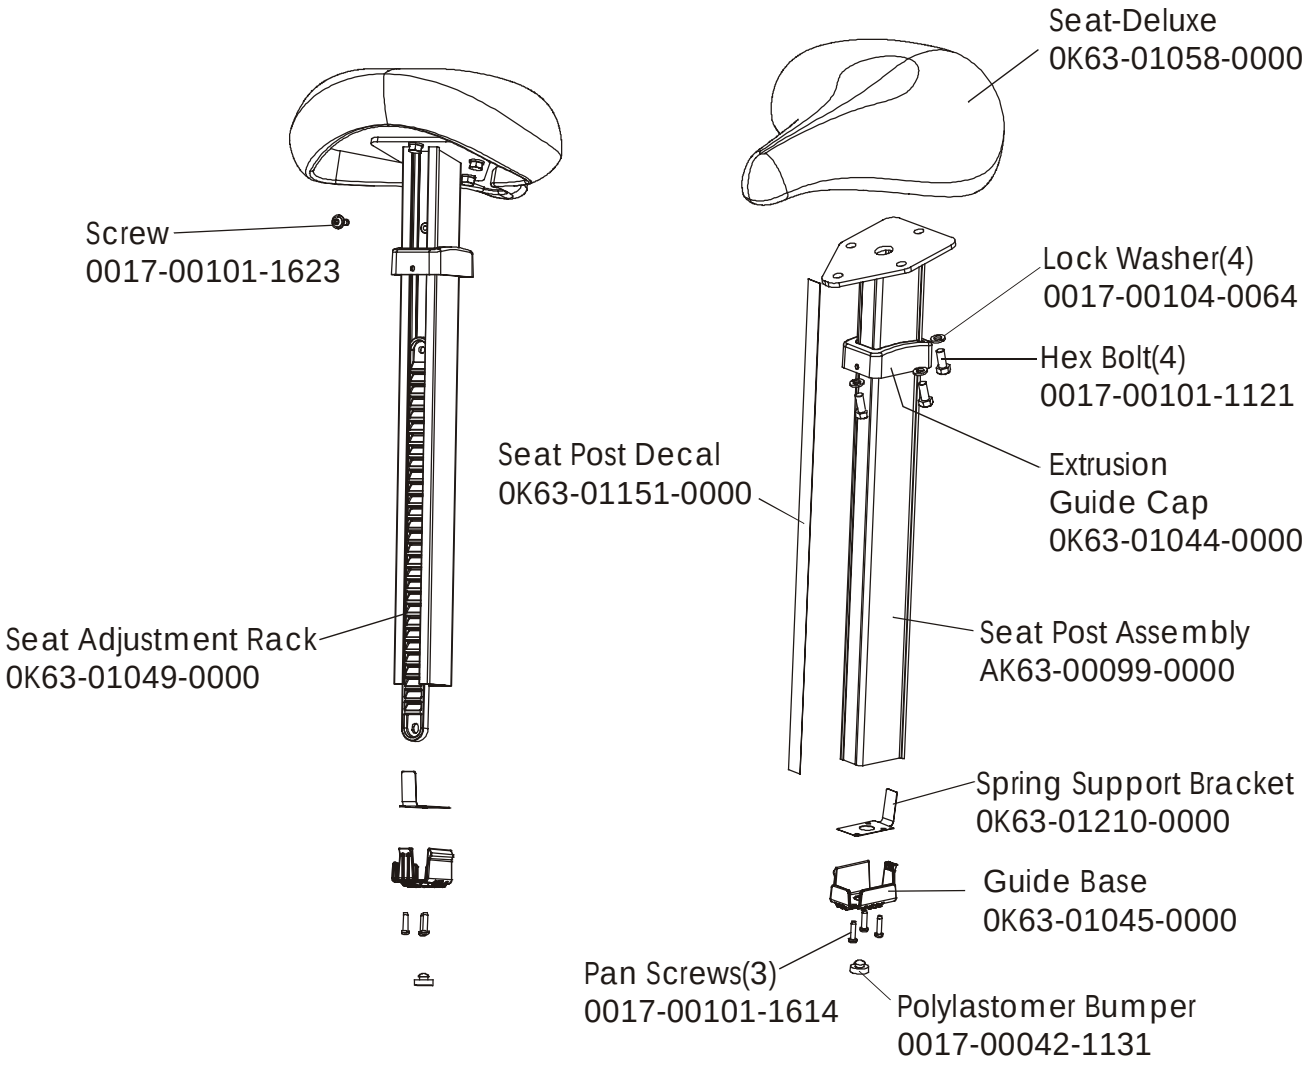
Seat-Deluxe
0K63-01058-0000
Screw
0017-00101-1623
Lock Washer(4)
0017-00104-0064
Hex Bolt(4)
0017-00101-1121
Seat Post Decal
0K63-01151-0000
Extrusion
Guide Cap
0K63-01044-0000
Seat Adjustment Rack
0K63-01049-0000
Seat Post Assembly
AK63-00099-0000
Spring Support Bracket
0K63-01210-0000
Guide Base
0K63-01045-0000
Pan Screws(3)
0017-00101-1614
Polylastomer Bumper
0017-00042-1131

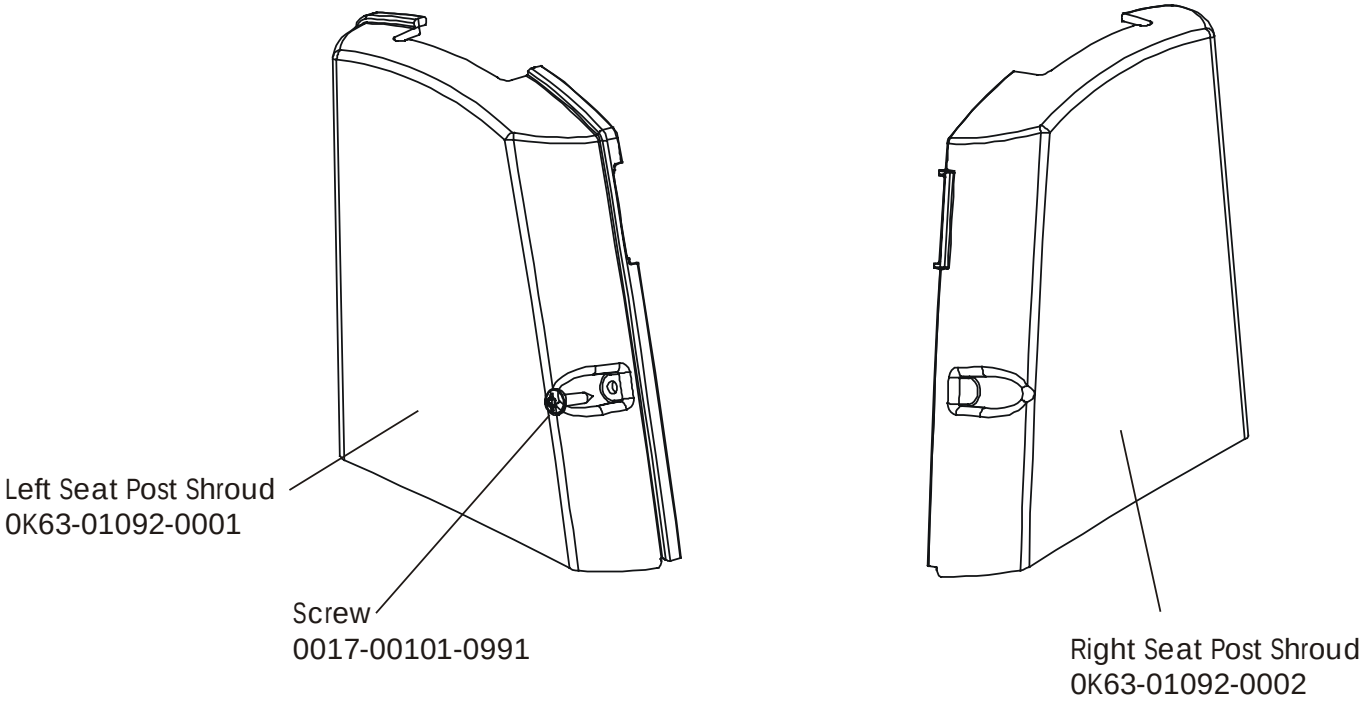
Left Seat Post Shroud
0K63-01092-0001
Screw
0017-00101-0991
Right Seat Post Shroud
0K63-01092-0002

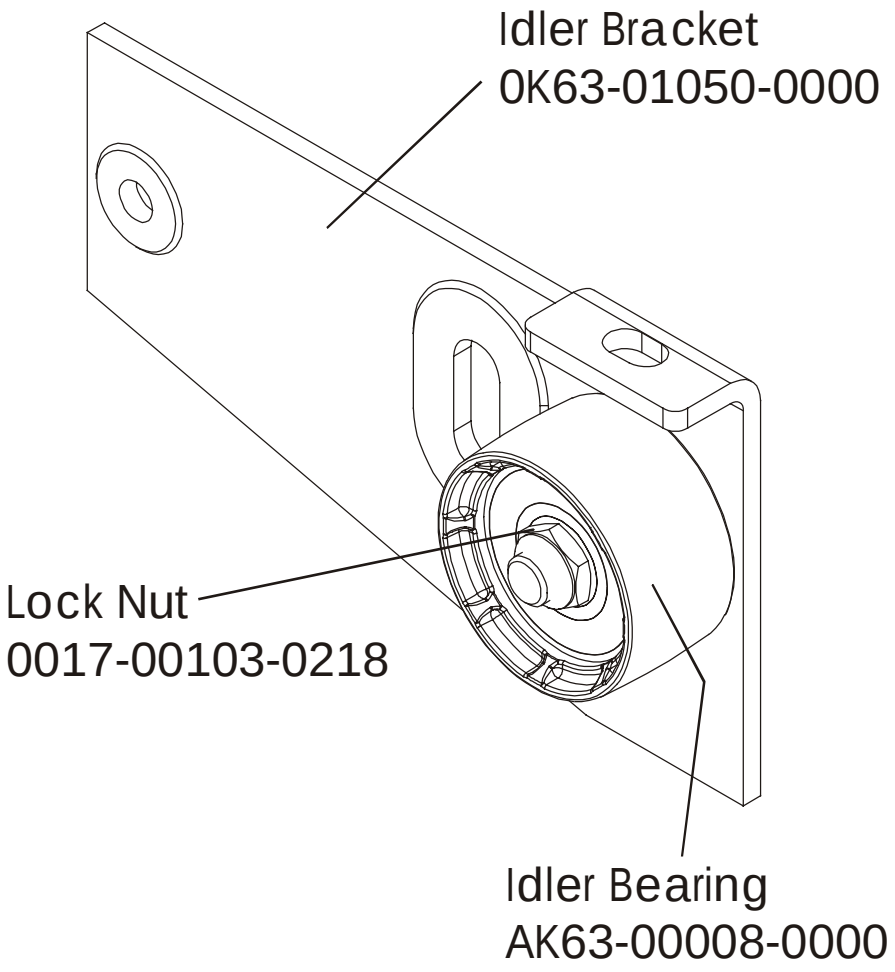
Idler Bracket
0K63-01050-0000
Lock Nut
0017-00103-0218
Idler Bearing
AK63-00008-0000

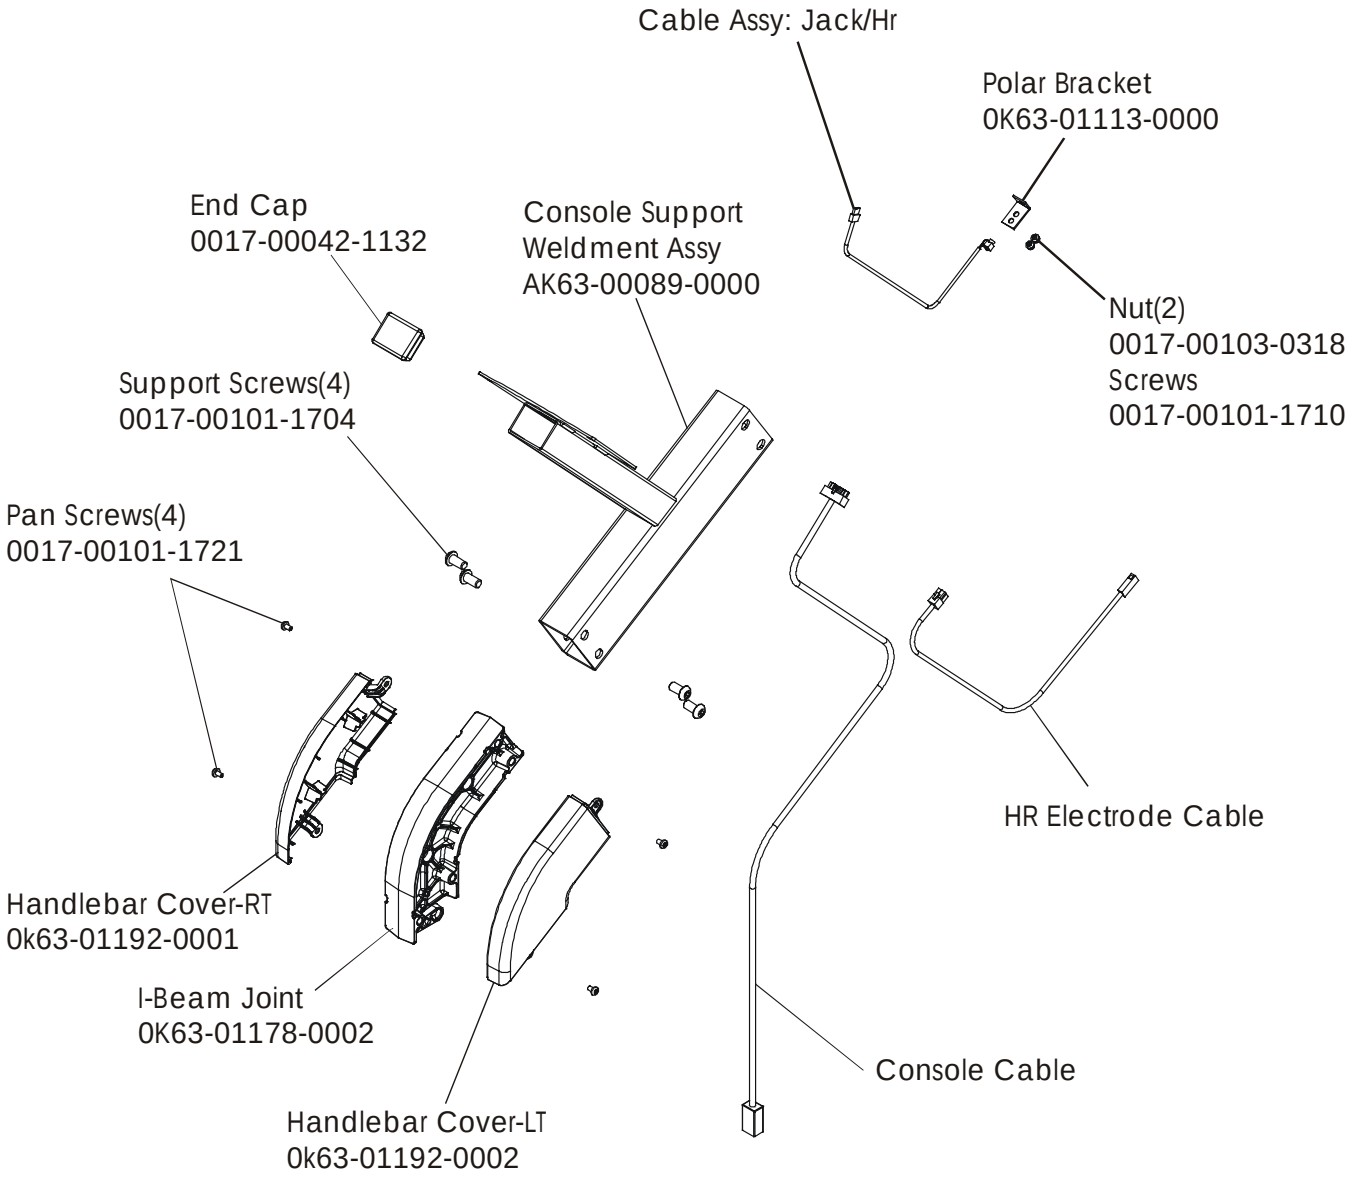
Cable Assy: Jack/Hr
Polar Bracket
0K63-01113-0000
End Cap
0017-00042-1132
Console Support
Weldment Assy
AK63-00089-0000
Nut(2)
0017-00103-0318
Screws
0017-00101-1710
Support Screws(4)
0017-00101-1704
Pan Screws(4)
0017-00101-1721
HR Electrode Cable
Handlebar Cover-RT
0k63-01192-0001
I-Beam Joint
0K63-01178-0002
Console Cable
Handlebar Cover-LT
0k63-01192-0002

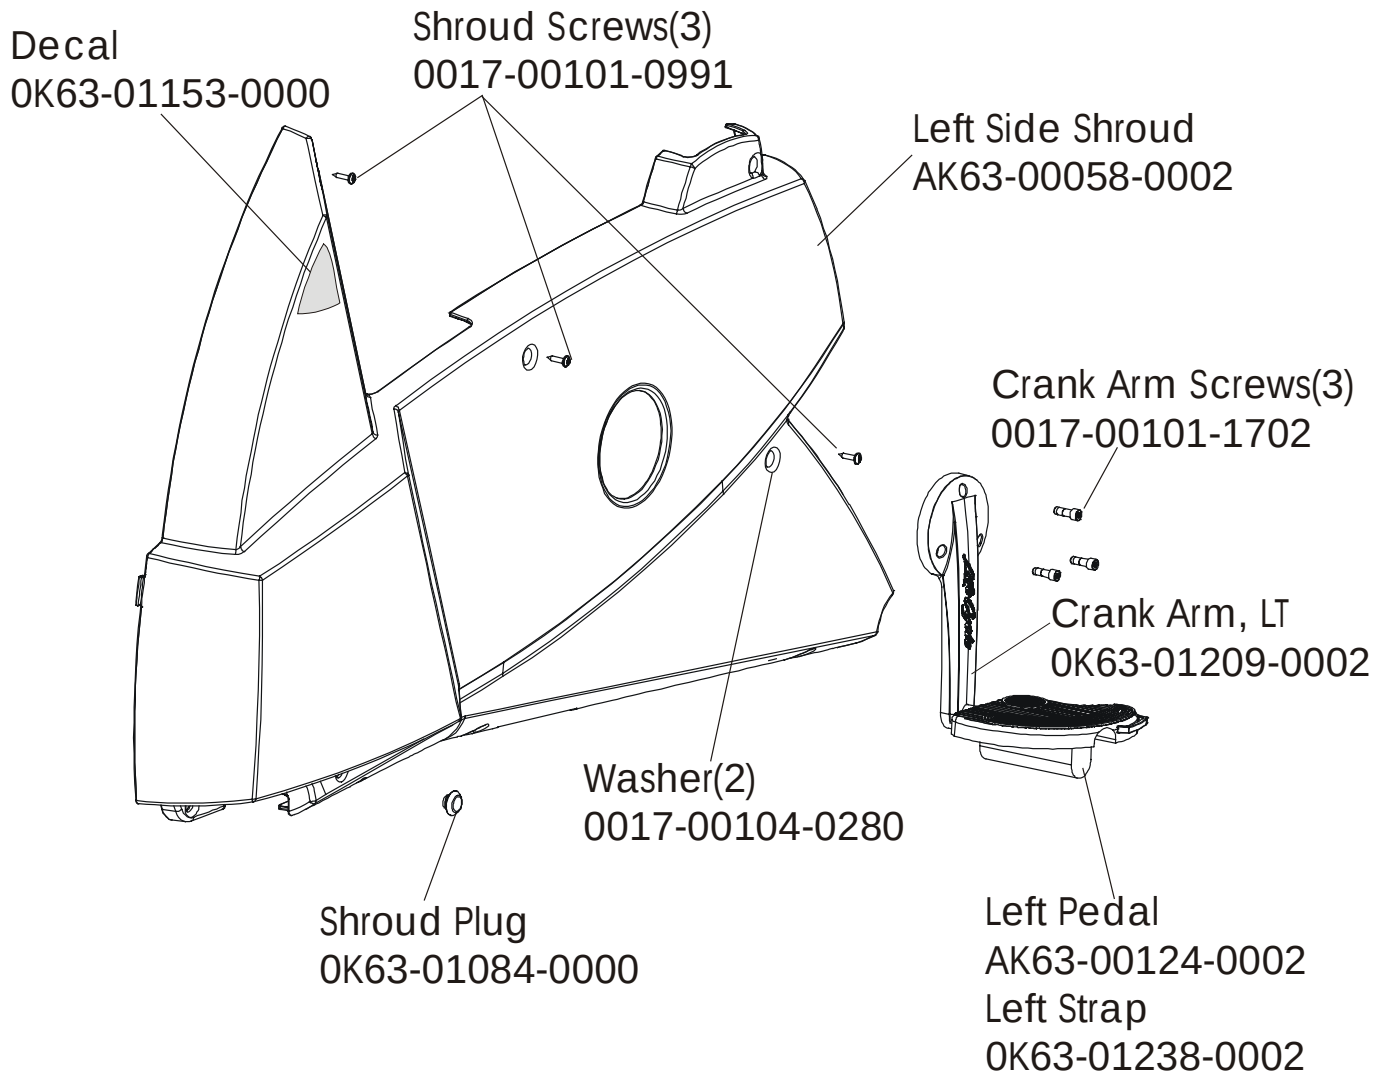
Decal
0K63-01153-0000
Shroud Screws(3)
0017-00101-0991
Left Side Shroud
AK63-00058-0002
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, LT
0K63-01209-0002
Washer(2)
0017-00104-0280
Shroud Plug
0K63-01084-0000
Left Pedal
AK63-00124-0002
Left Strap
0K63-01238-0002

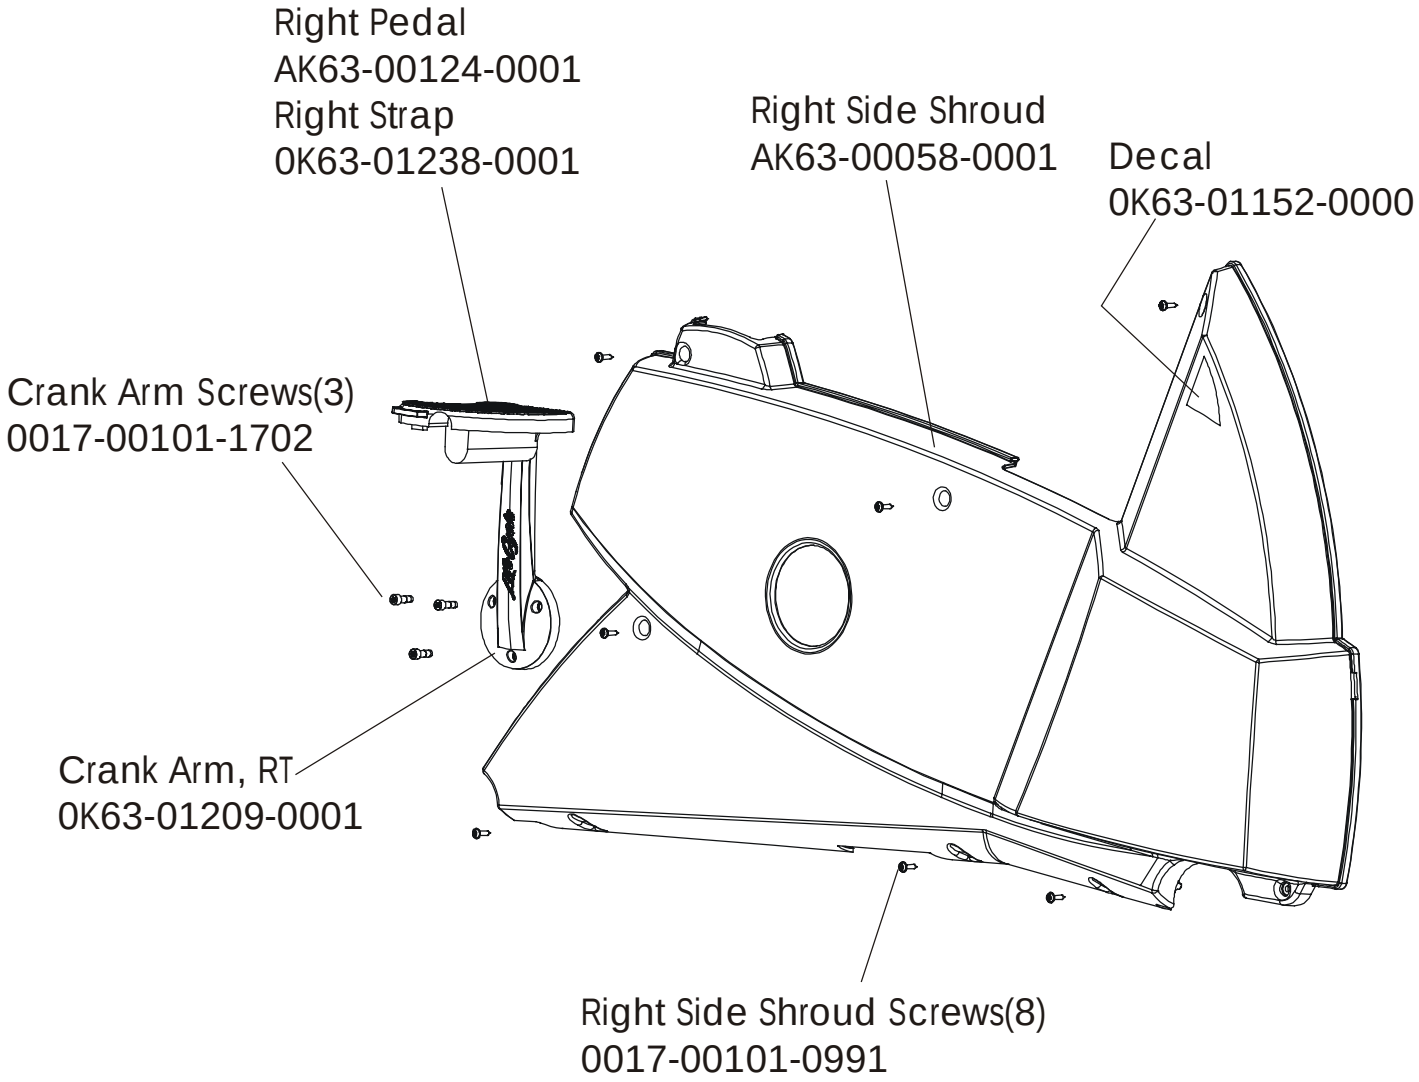
Right Pedal
AK63-00124-0001
Right Strap
0K63-01238-0001
Right Side Shroud
AK63-00058-0001
Decal
0K63-01152-0000
Crank Arm Screws(3)
0017-00101-1702
Crank Arm, RT
0K63-01209-0001
Right Side Shroud Screws(8)
0017-00101-0991

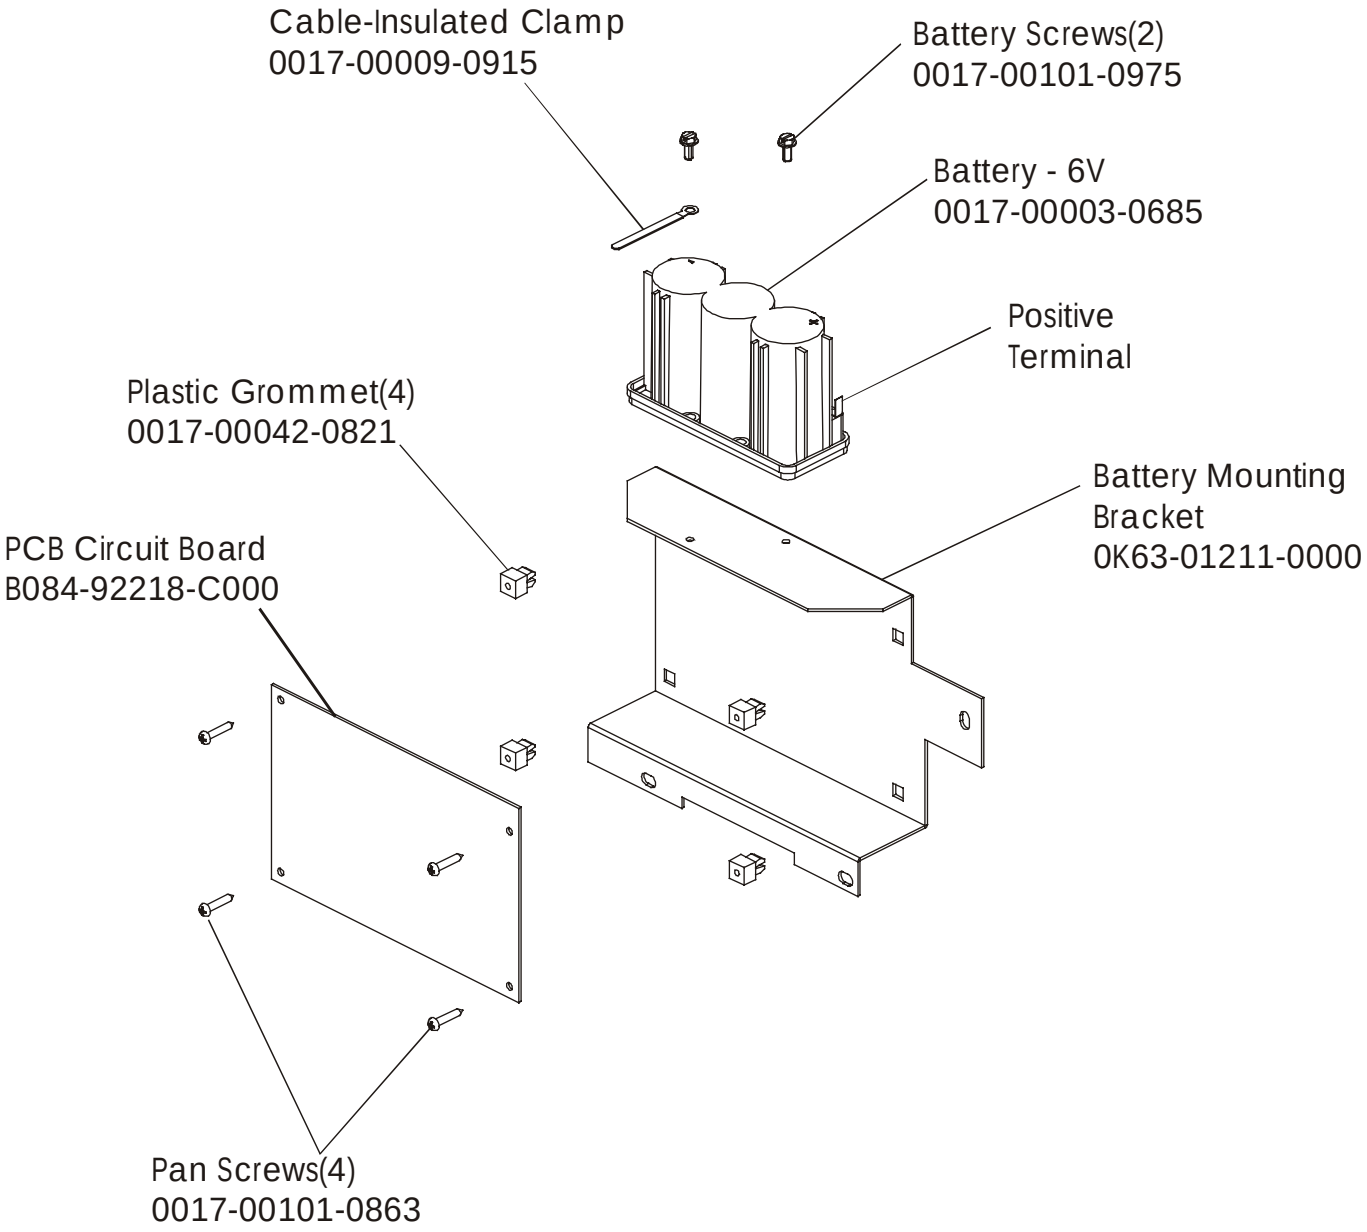
Cable-Insulated Clamp
0017-00009-0915
Battery Screws(2)
0017-00101-0975
Battery - 6V
0017-00003-0685
Positive
Terminal
Plastic Grommet(4)
0017-00042-0821
Battery Mounting
Bracket
0K63-01211-0000
PCB Circuit Board
B084-92218-C000
Pan Screws(4)
0017-00101-0863

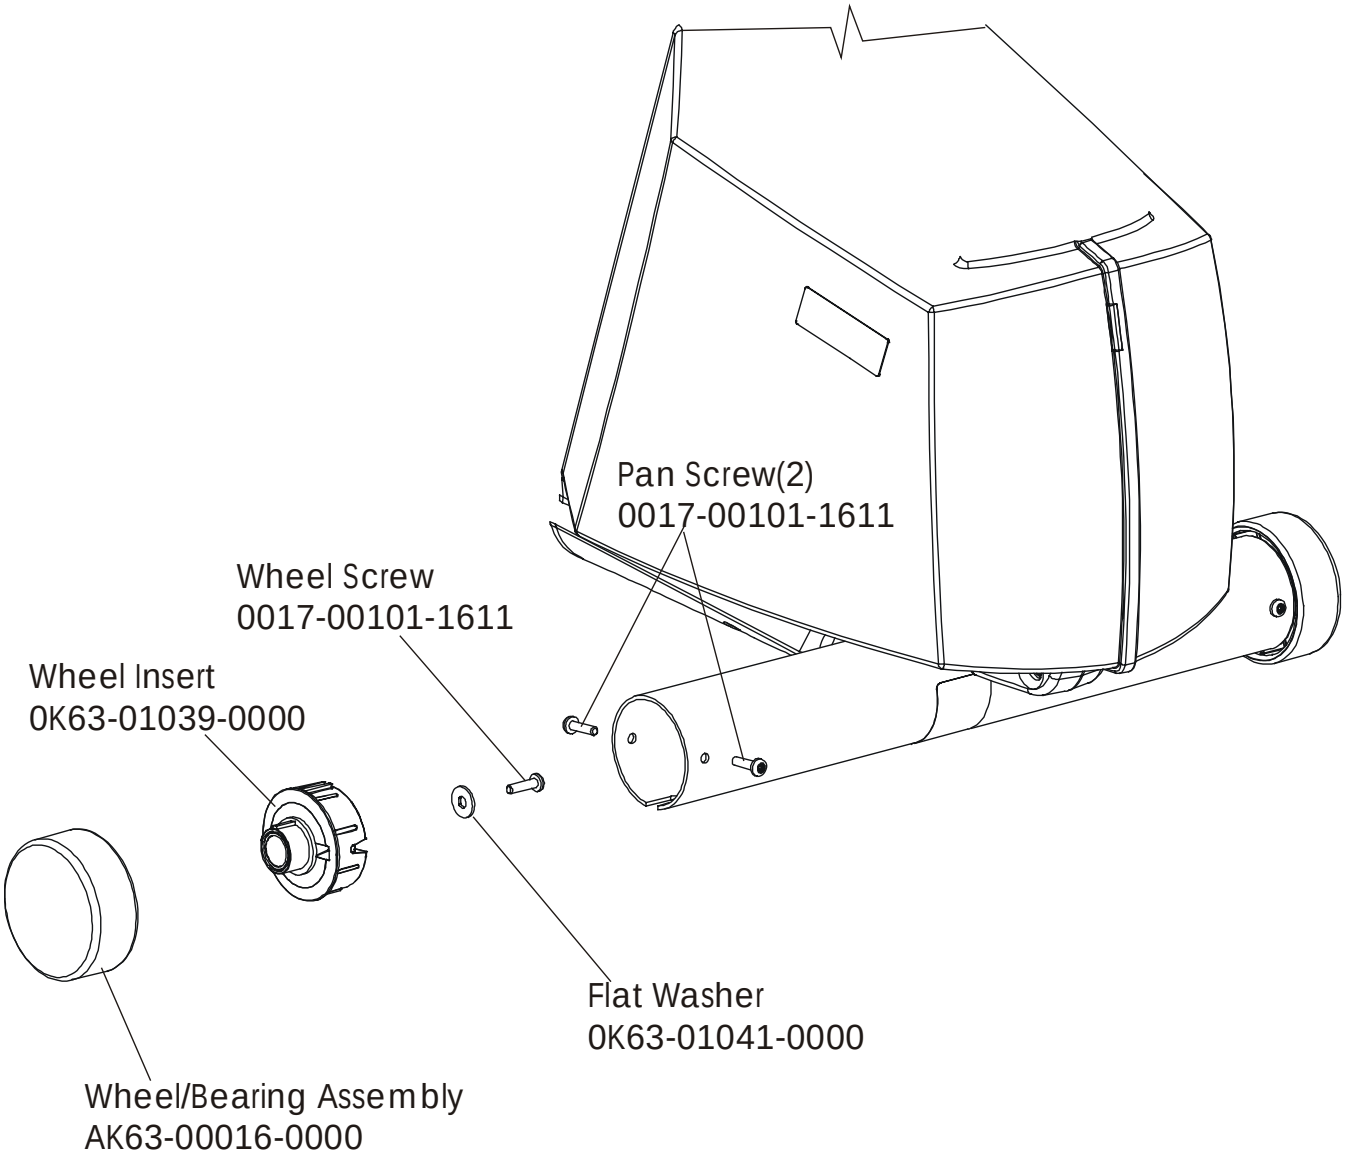
Pan Screw(2)
0017-00101-1611
Wheel Screw
0017-00101-1611
Wheel Insert
0K63-01039-0000
Flat Washer
0K63-01041-0000
Wheel/Bearing Assembly
AK63-00016-0000

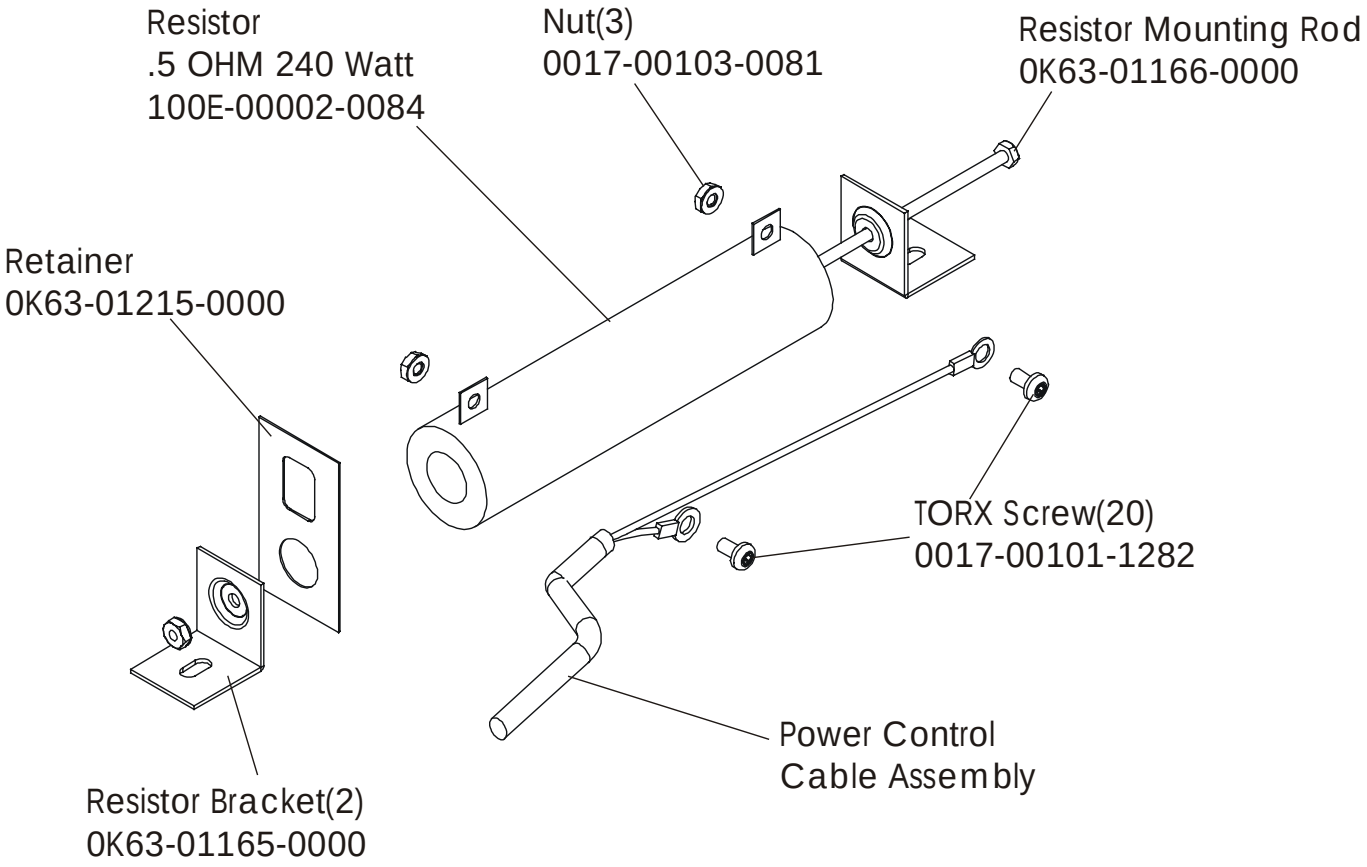
Resistor
.5 OHM 240 Watt
100E-00002-0084
Nut(3)
0017-00103-0081
Resistor Mounting Rod
0K63-01166-0000
Retainer
0K63-01215-0000
TORX Screw(20)
0017-00101-1282
Power Control
Cable Assembly
Resistor Bracket(2)
0K63-01165-0000

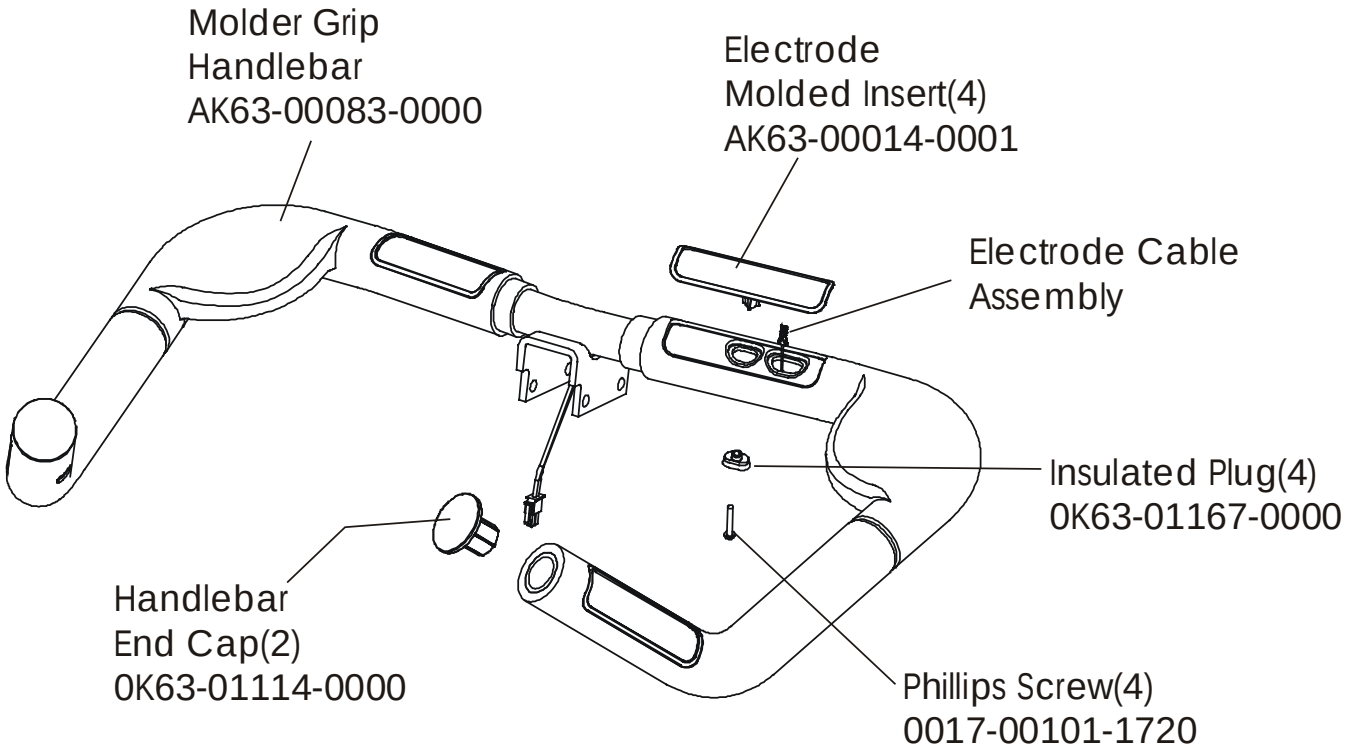
Molder Grip
Handlebar
AK63-00083-0000
Electrode
Molded Insert(4)
AK63-00014-0001
Electrode Cable
Assembly
Insulated Plug(4)
0K63-01167-0000
Handlebar
End Cap(2)
0K63-01114-0000
Phillips Screw(4)
0017-00101-1720

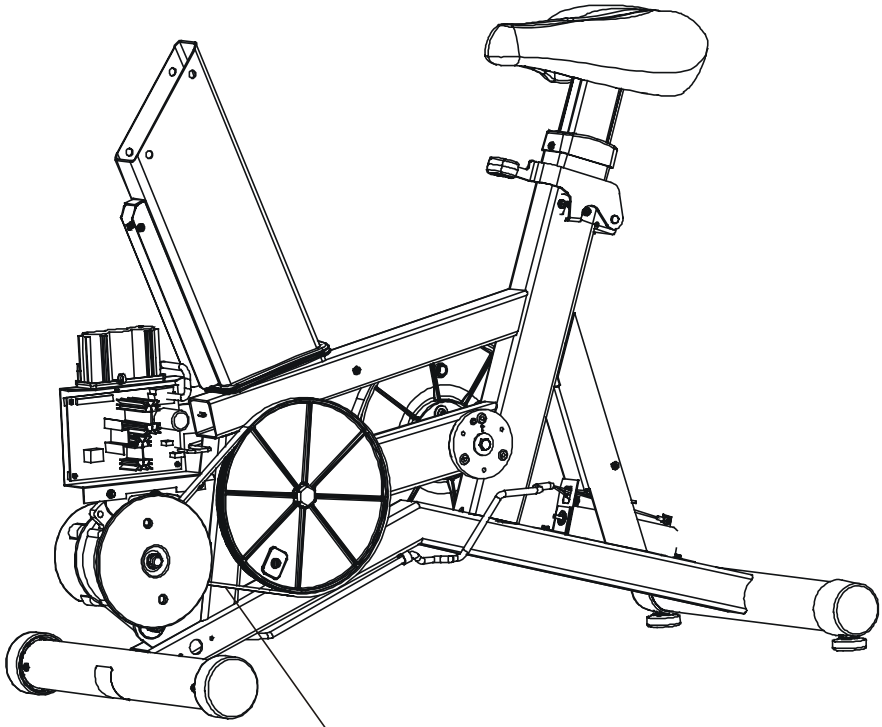

Alternator Belt
0K63-01065-0000

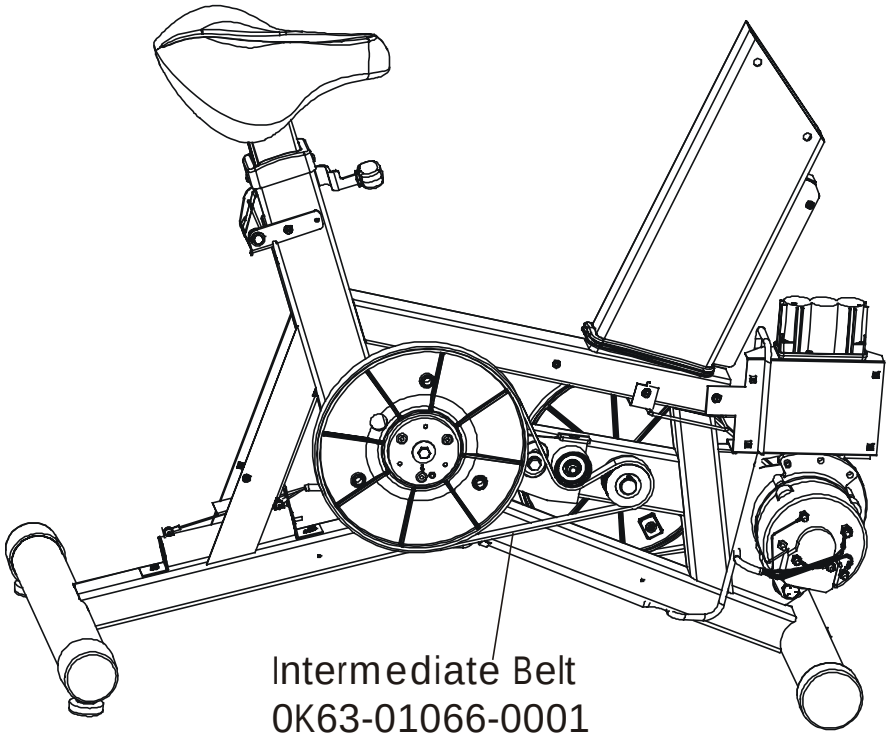

Intermediate Belt
0K63-01066-0001

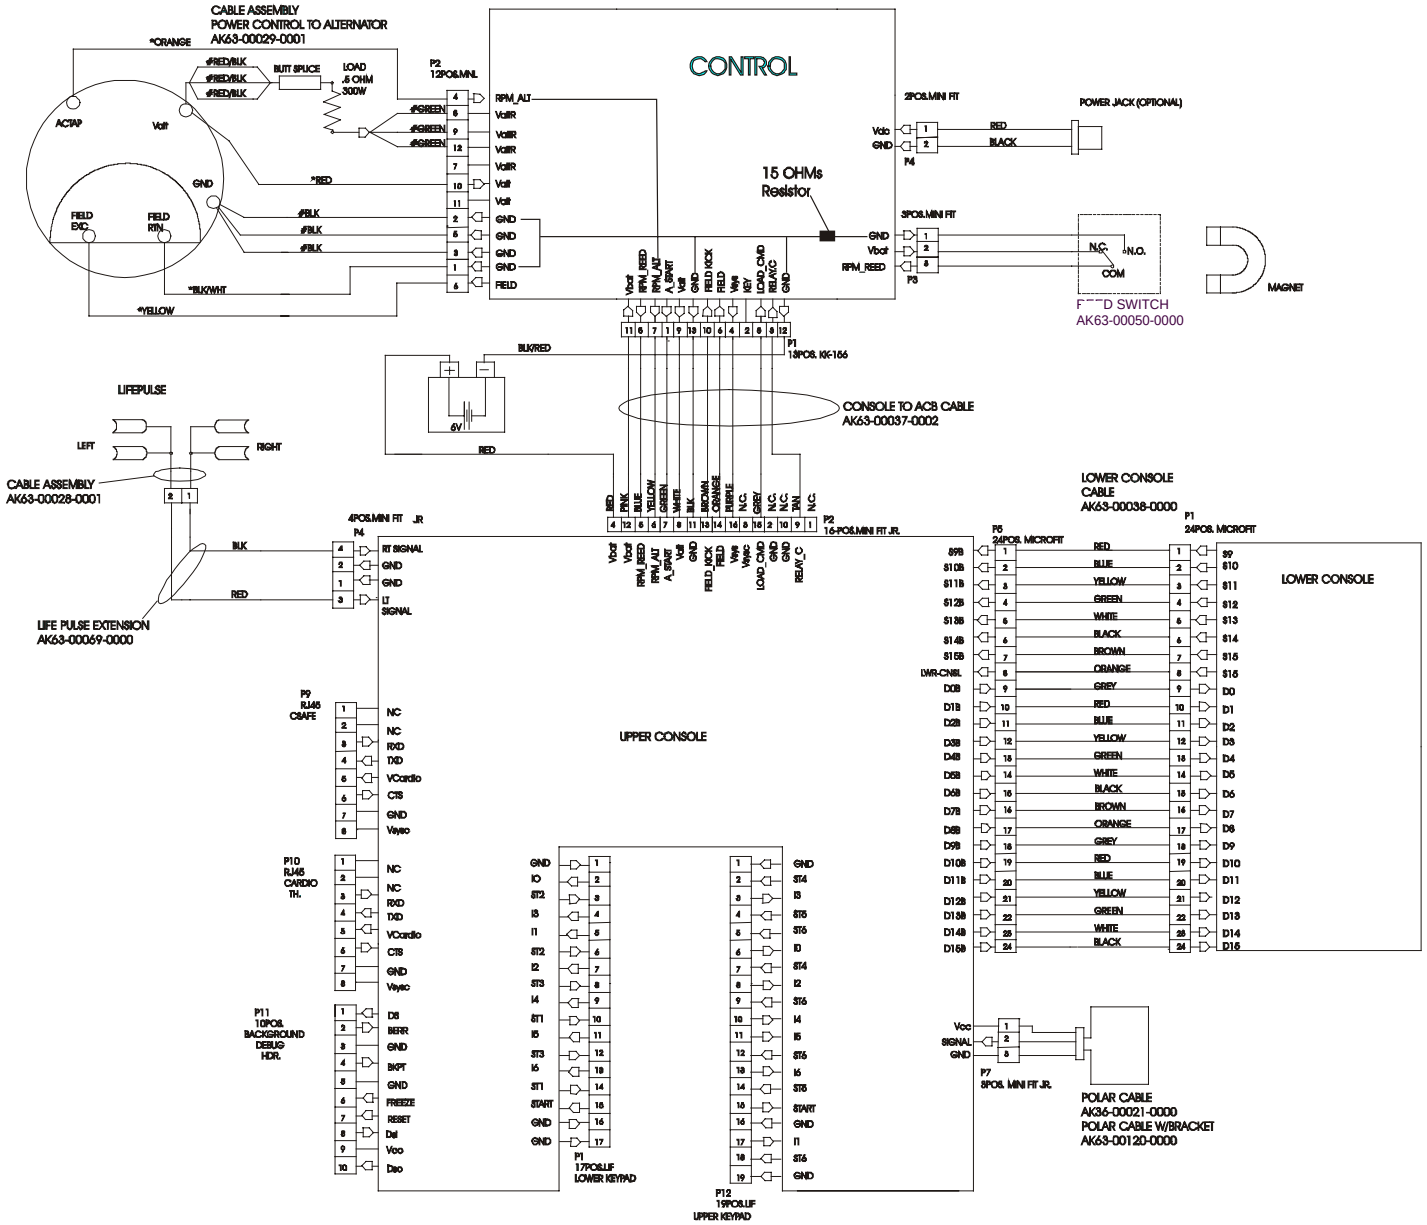
CABLE ASSEMBLY
POWER CONTROL TO ALTERNATOR
AK63-00029-0001
CONTROL
15 OHMs
Resistor
POWER JACK (OPTIONAL)
MAGNET
CONSOLE TO ACB CABLE
AK63-00037-0002
LIFEPULSE
CABLE ASSEMBLY
AK63-00028-0001
LIFE PULSE EXTENSION
AK63-00069-0000
LOWER CONSOLE
CABLE
AK63-00038-0000
LOWER CONSOLE
UPPER CONSOLE
POLAR CABLE
AK36-00021-0000
POLAR CABLE W/BRACKET
AK63-00120-0000